



SAVING INTO A CUSTOM MEMORY

To Save into a Custom Preset, **Hold the "Limiter" and "Delay"** buttons down until you see **"Store: Select No"**
Choose a location (1-20) to store your preset, then press the "Down" button to go into **"Store: Edit Name"**
Edit the name for your preset using the "Down" and the "Up" buttons to move the cursor and the Jog Dial to edit the letters & numbers.
 When you have finished naming the Custom Preset, **Hold the "Limiter" and "Delay"** buttons down until you see "Preset Stored"

NOTE: The Bass Array settings in the controller have the delay times pre-set but they **CAN NOT** be edited in the delay window.
 You will have to edit standard MB4/502B Presets to create arrays and store them in the Custom section

NOTE: You cannot store Dual Mono presets in the Custom preset section. You have to save them as individual mono Custom presets and combine them into a Custom Dual Mono preset as you usually would in the standard presets section.

Output Matrix	
Each output can be reset, regardless of Preset settings:	
Ch 1/High	
Ch 2/High	
Mono/High	
Ch 1 /Low	
Ch 2/Low	
Mono/Low	
Ch 1/Full Range	
Ch 2/Full Range	
Mono/Full Range	
Ch 1/No EQ	
Ch 2/No EQ	
Mono/No EQ	